



Air Seeder Tow Between - 29 ft

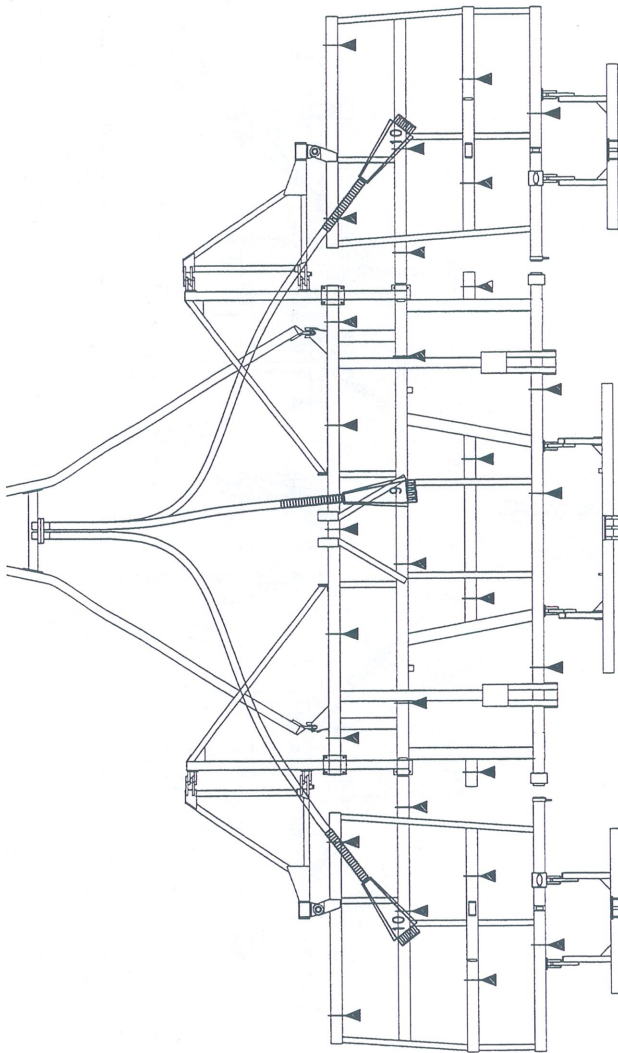


12" Spacing

Head Locations

Air Seeder Tow Between - 34 ft

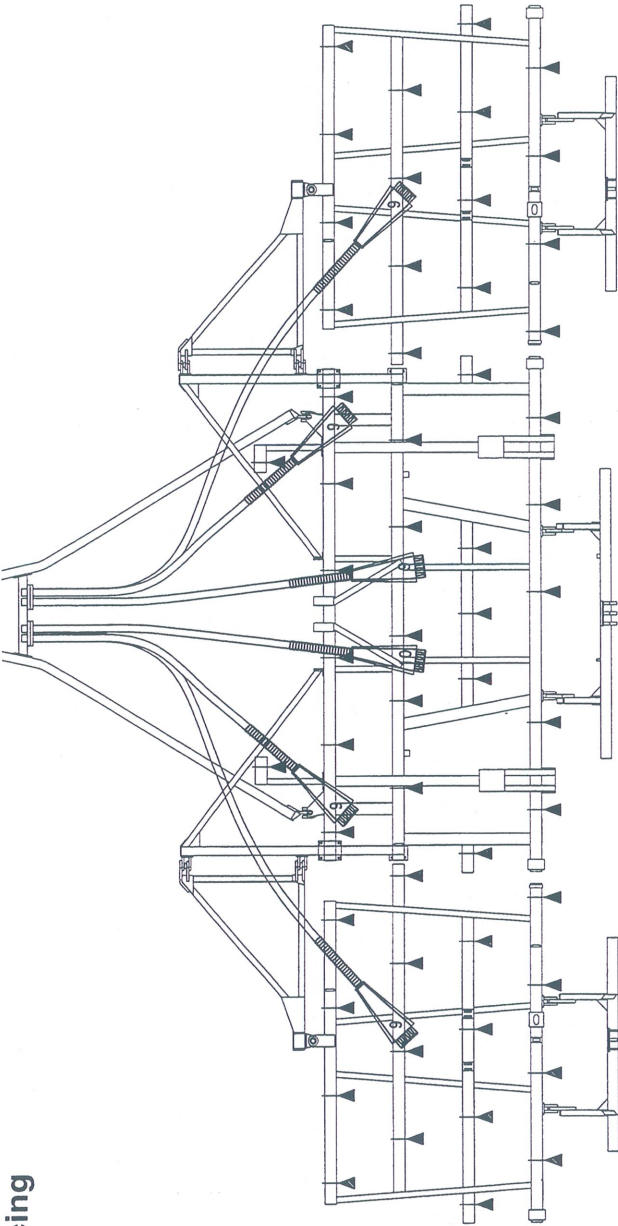


7 1/2" Spacing

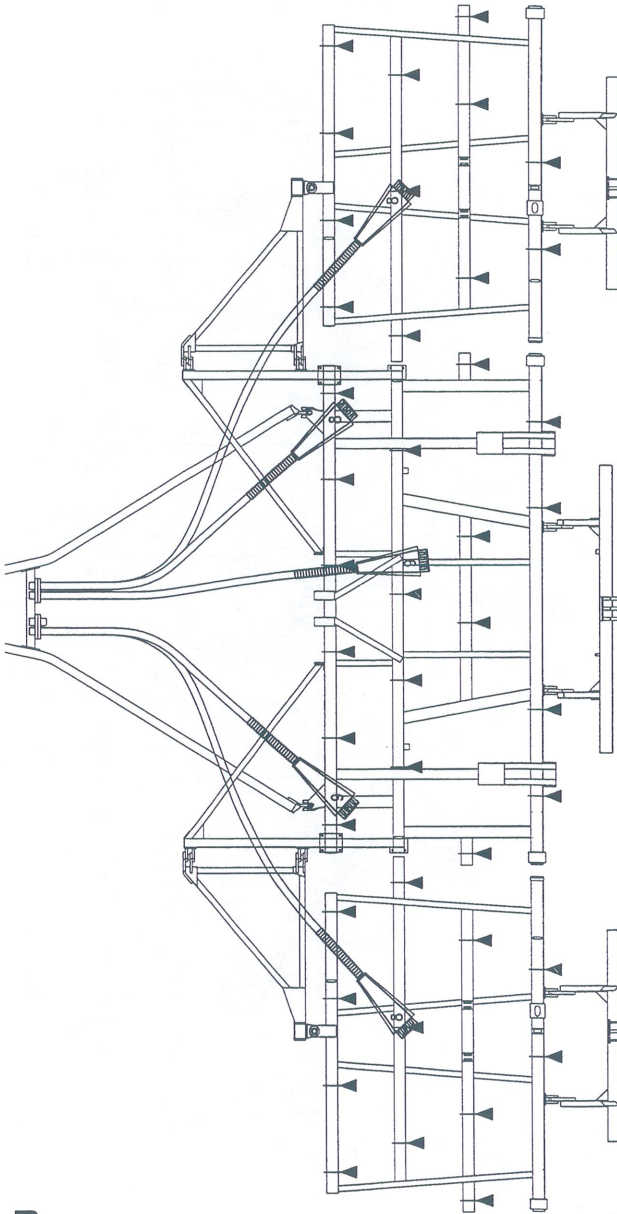

10" Spacing

Head Locations

Air Seeder Tow Between - 34 ft

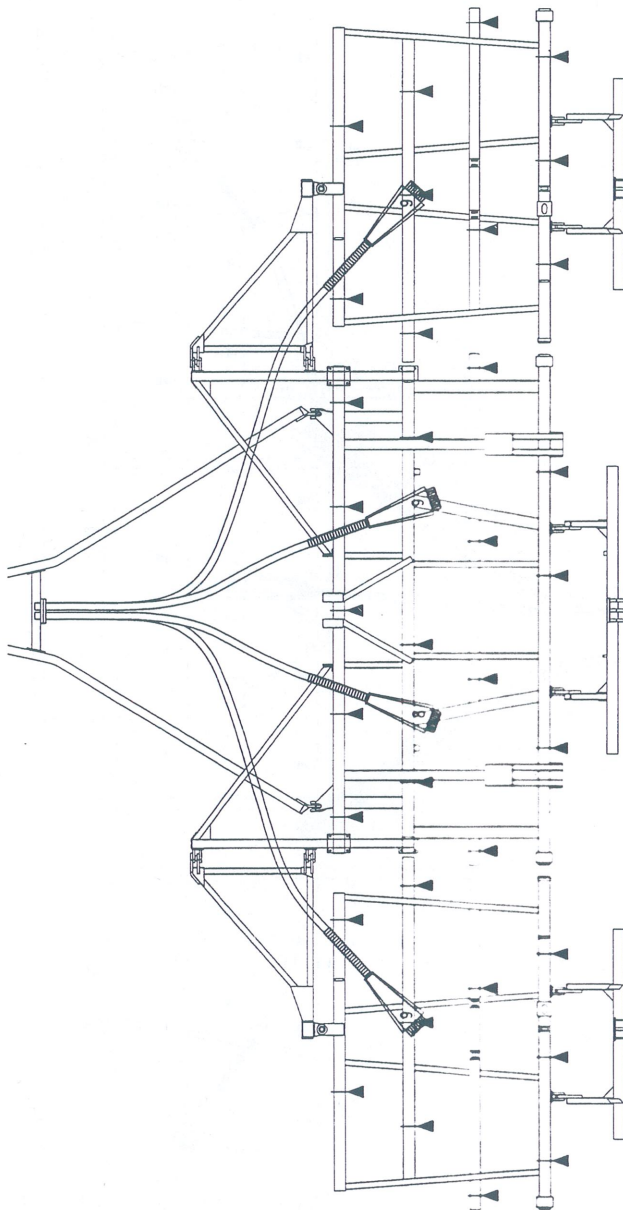


Note: Divider head stands mounted on wings must be cut 12" shorter for Double Shoot Openers


12" Spacing

Head Locations

Air Seeder Tow Between - 39 ft

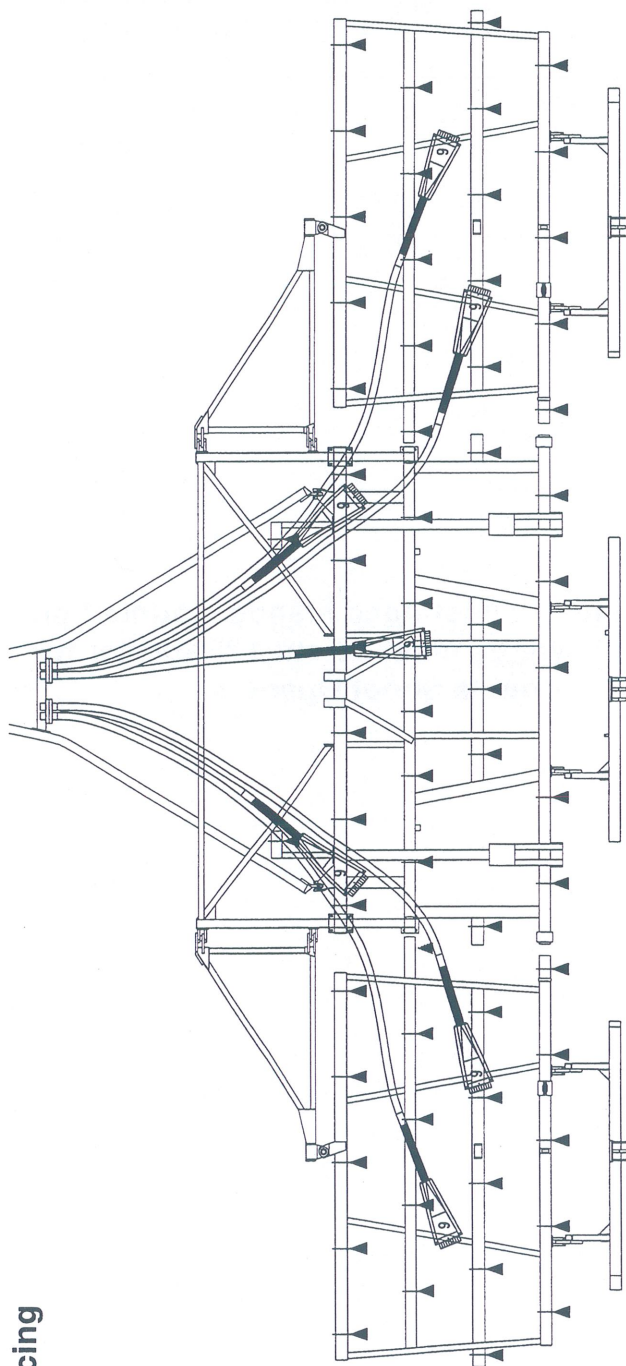

7 1/2" Spacing

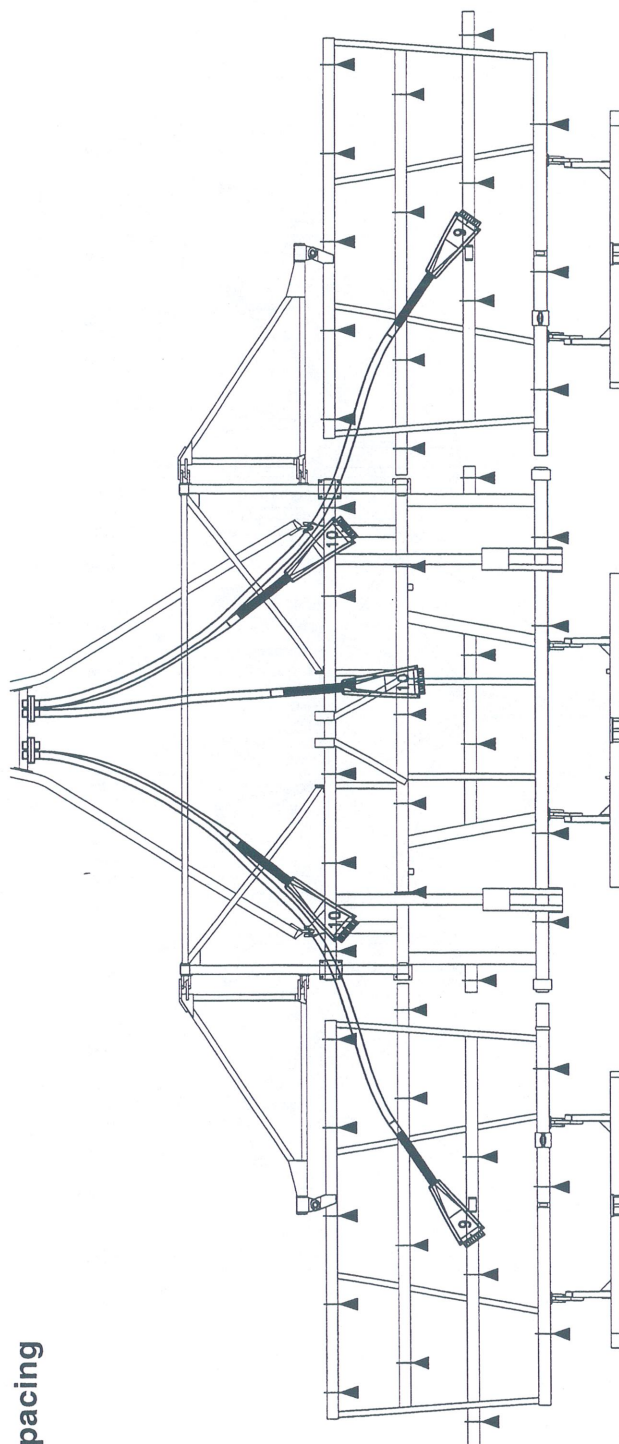


10" Spacing

Note: Divider head stands mounted on wings must be cut 12 1/2" shorter

Head Locations

Air Seeder Tow Between - 39 ft

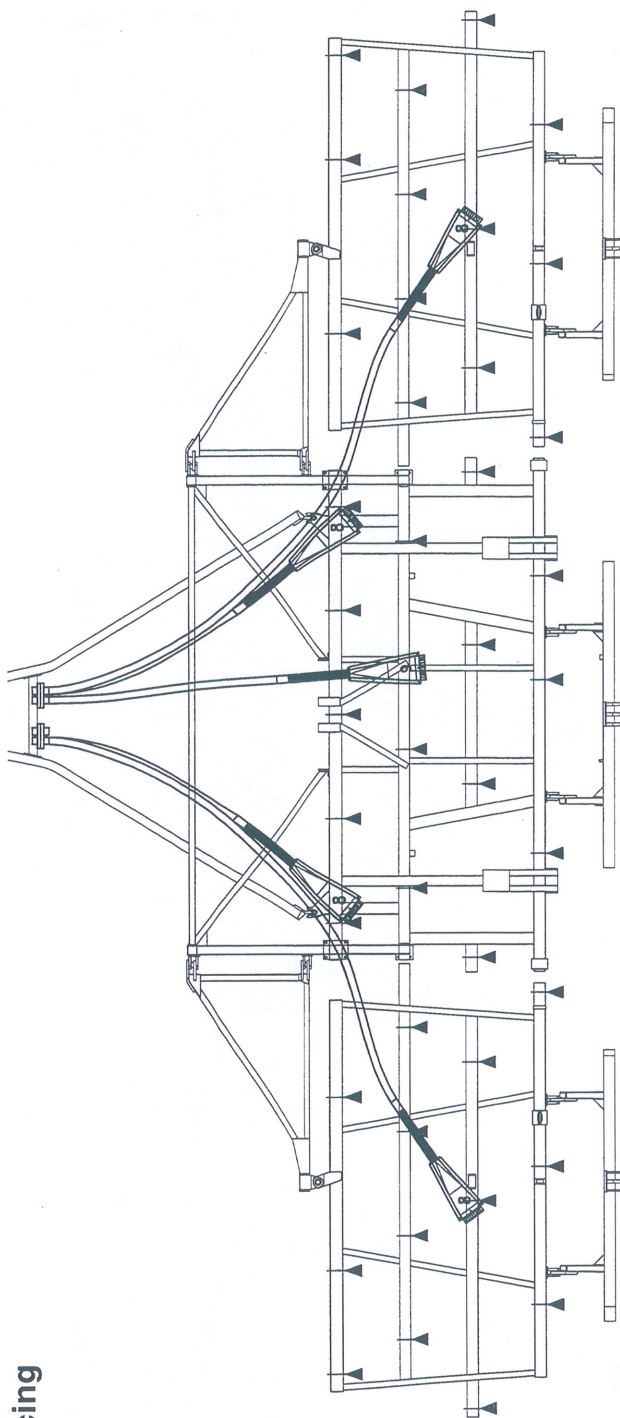


12" Spacing

Note: Divider head stands mounted on wings must be cut 12 1/2" shorter


Head Locations

Air Seeder Tow Between - 49 ft

7 1/2" Spacing

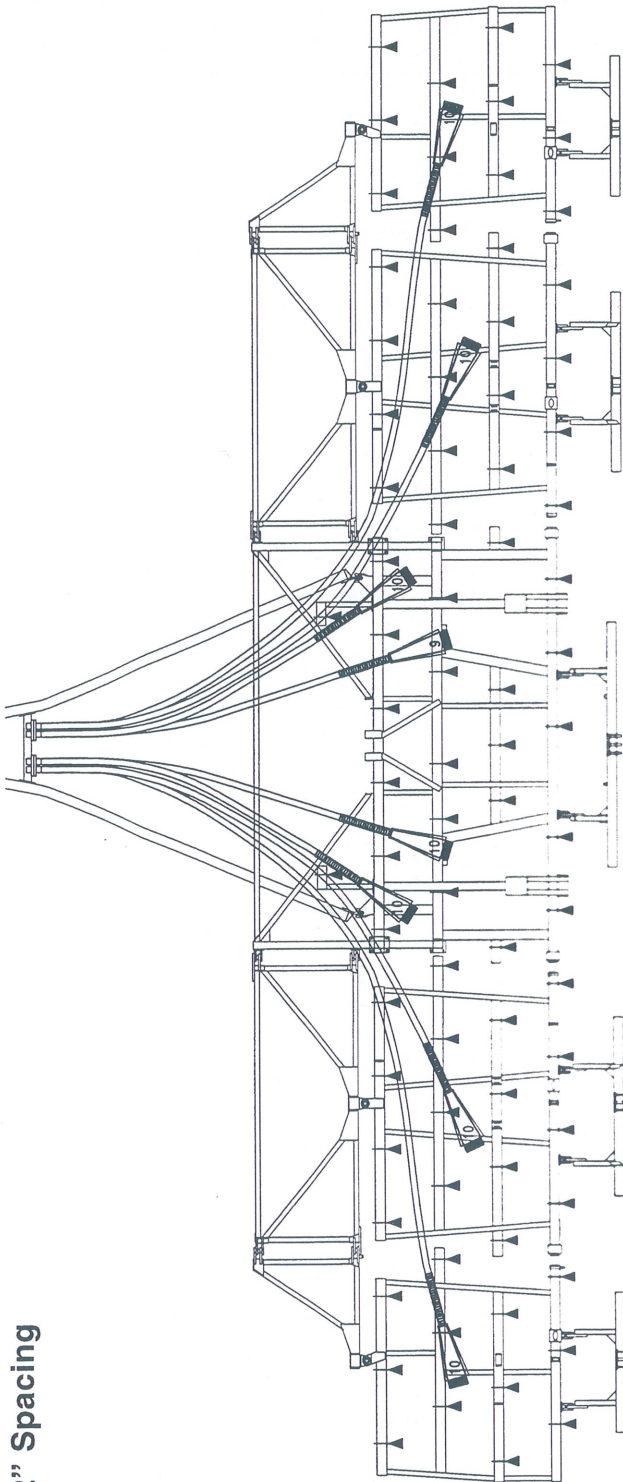


10" Spacing

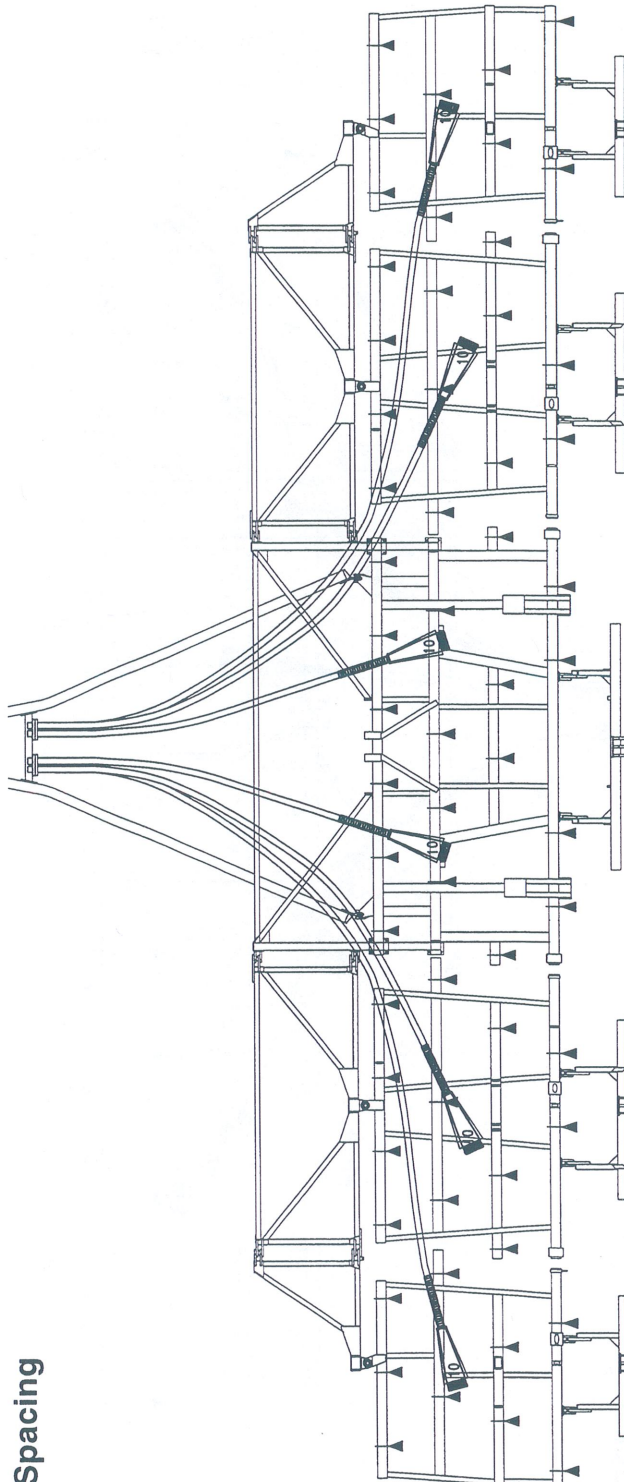

Head Locations


Air Seeder Tow Between - 49 ft

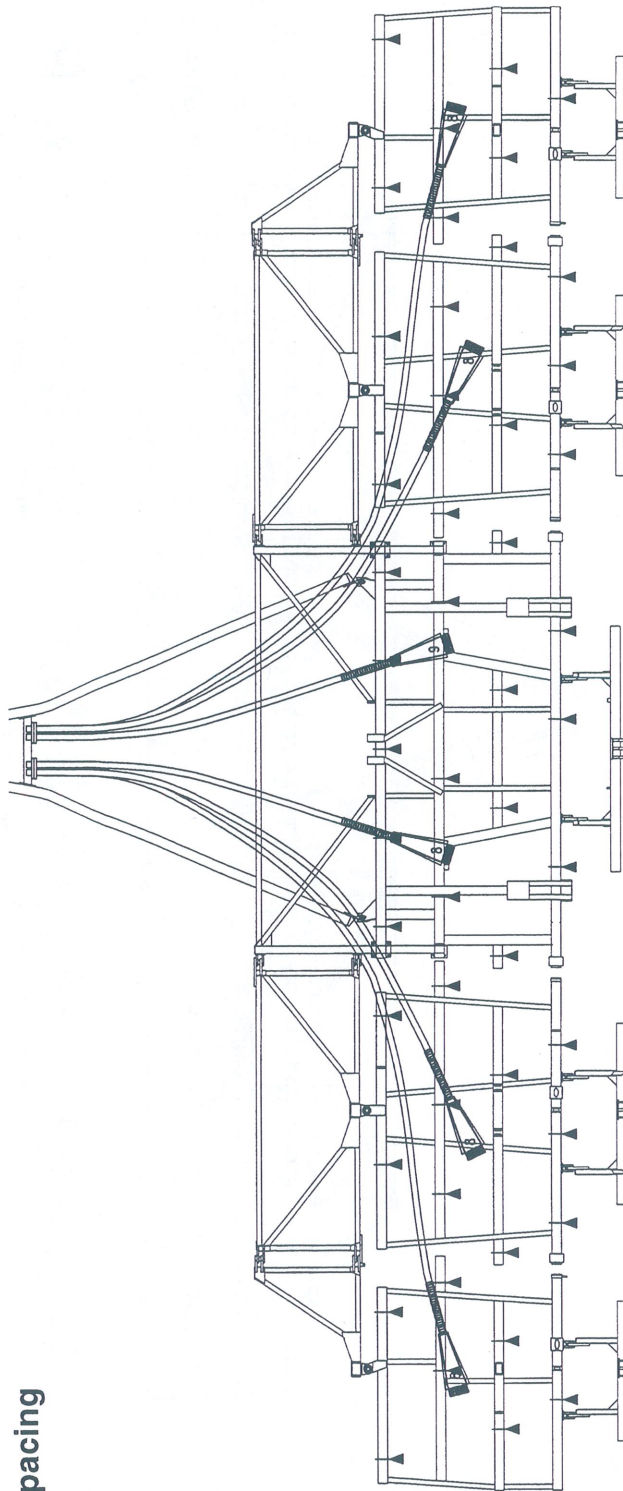


12" Spacing

Head Locations

Air Seeder Tow Between - 55 ft


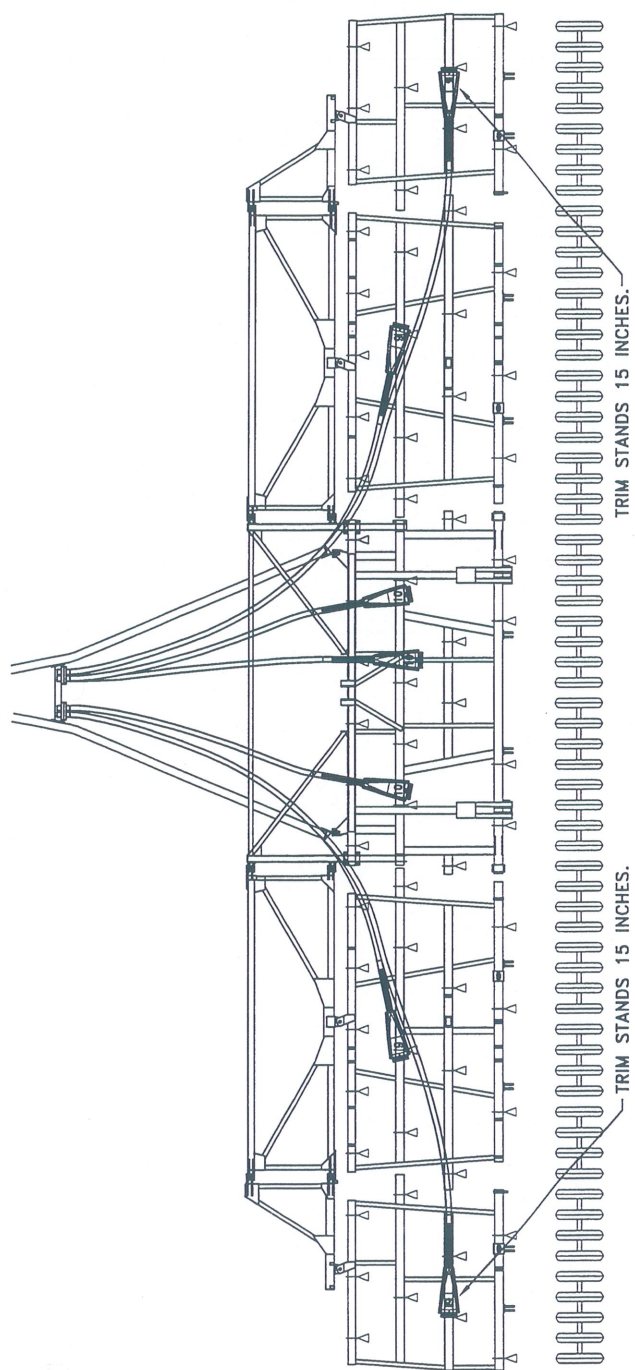


10" Spacing

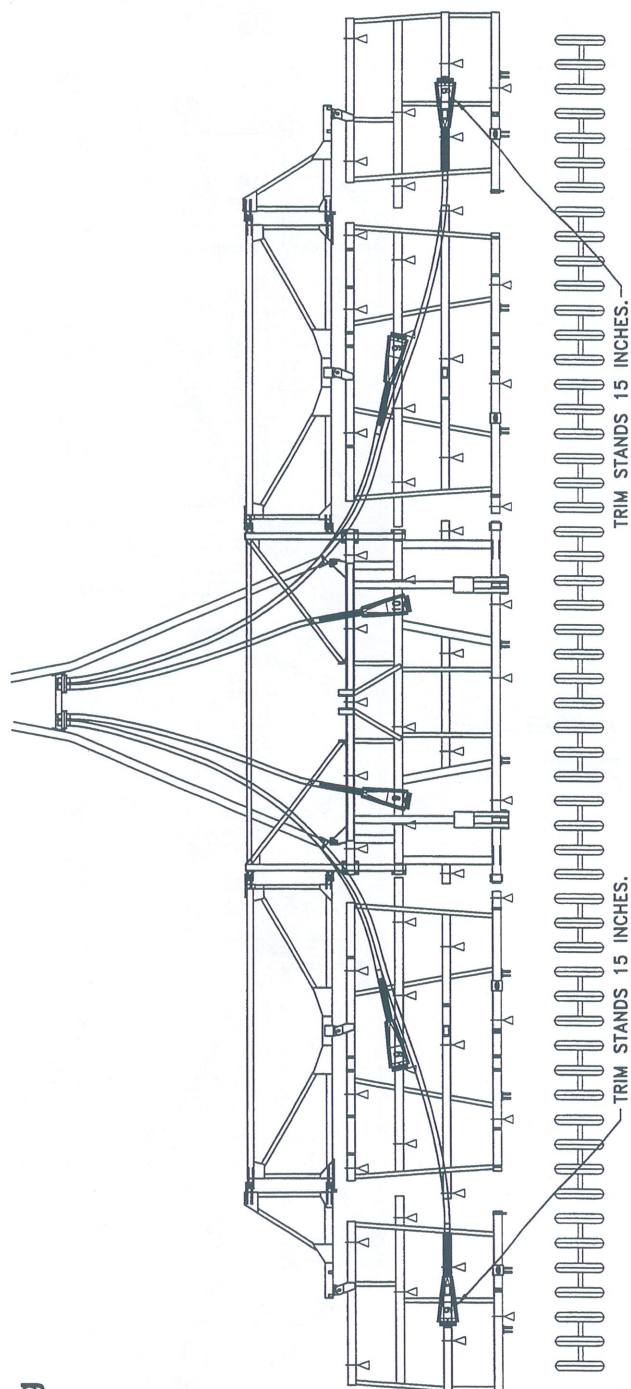

12" Spacing

Air Seeder Tow Between - 60 ft

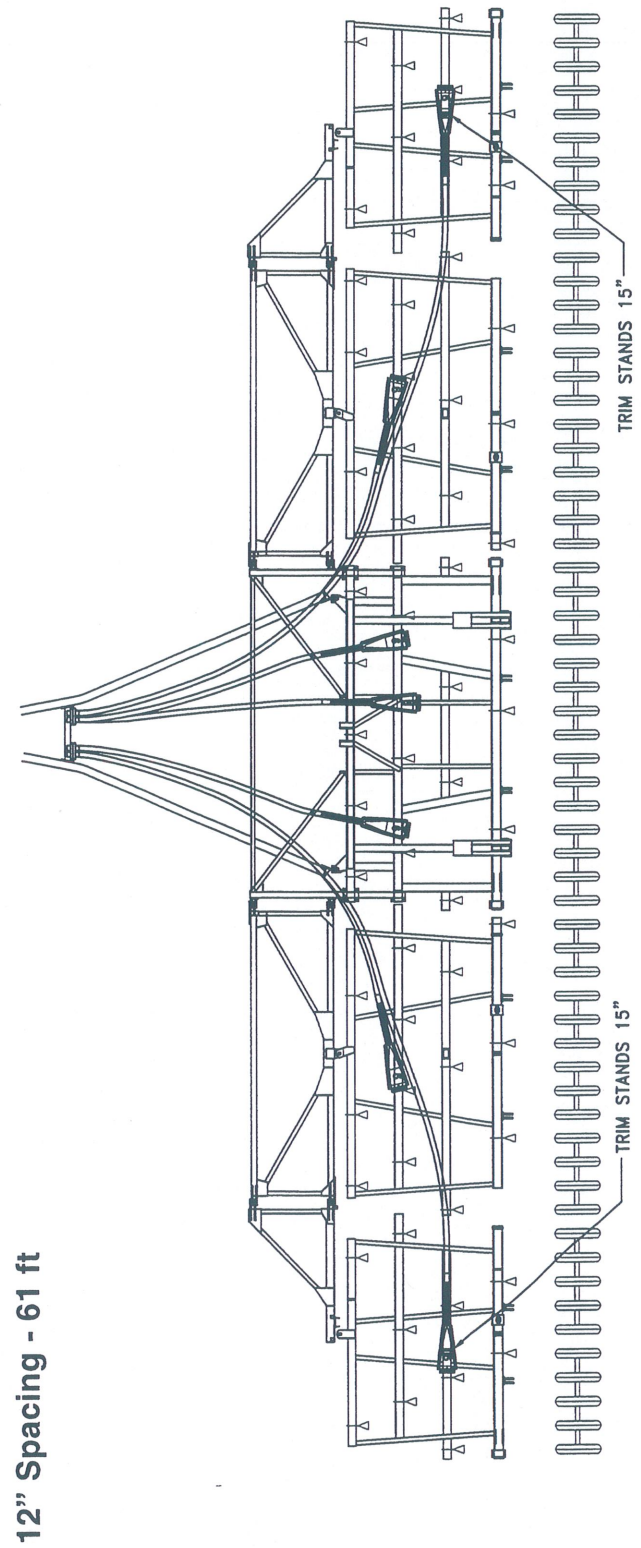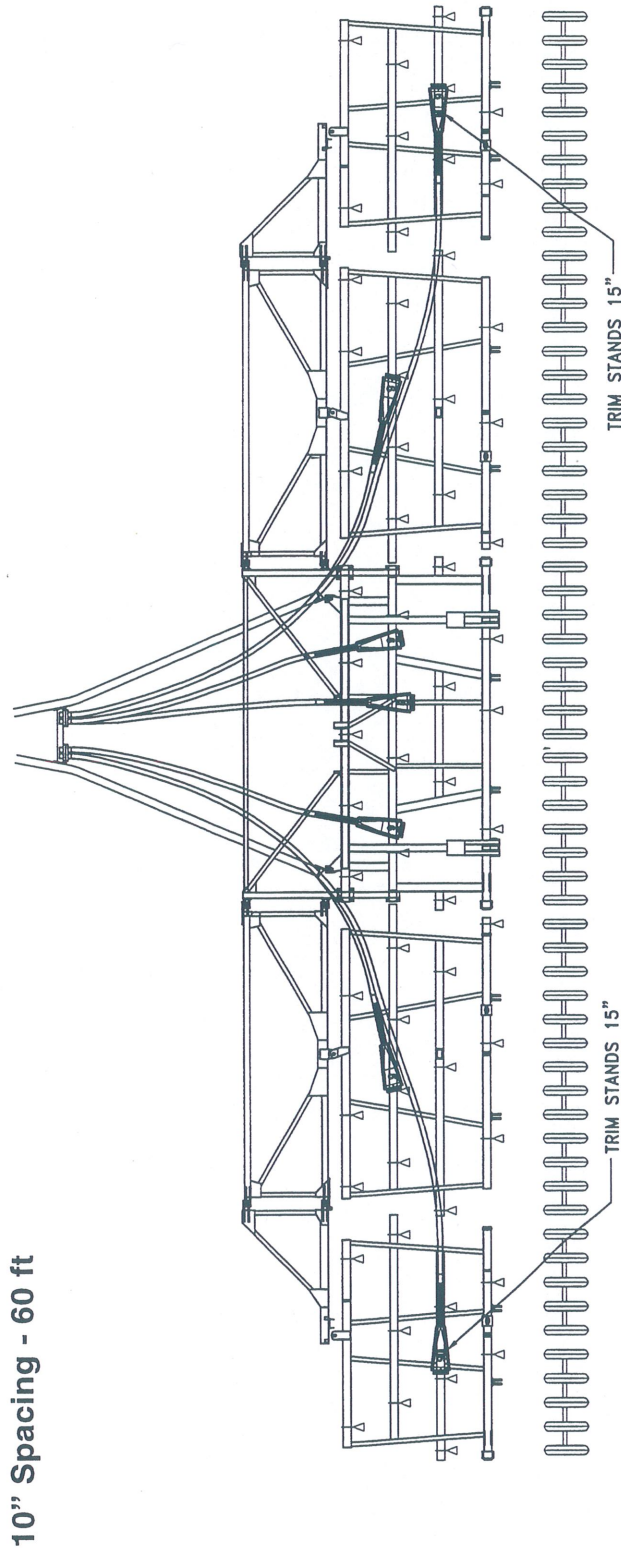


Head Locations

Notes

Coulter Locations


Long Mounting Bracket

- Used with double shoot openers.

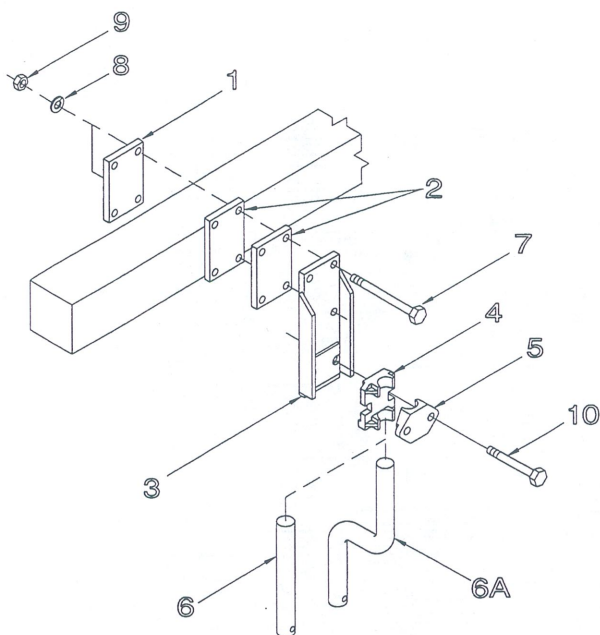

Short Mounting Bracket

- Used with single shoot openers.

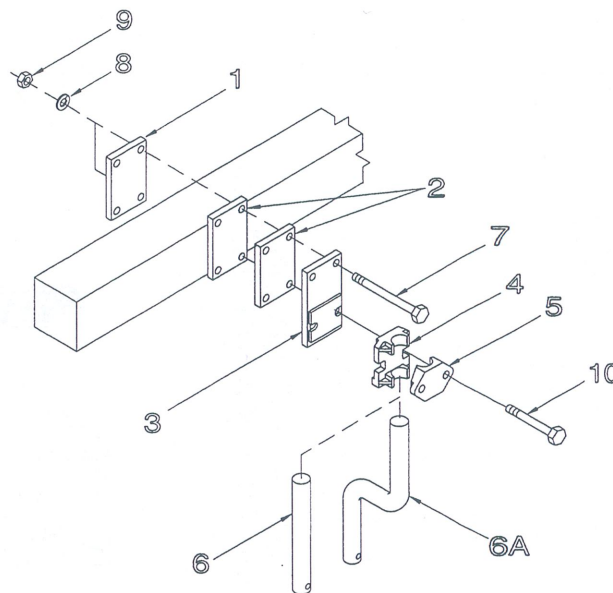

Mount - Standard

- Attach mounting bracket (3) to frame with mounting plate (1) and four - 5/8" x 6" bolts (7), lockwashers (8), and nuts (9).
- Attach Shank (6 or 6A) to bracket with clamps and two - 5/8" x 4 1/2" bolts (10), lockwashers (8), and nuts (9).

Mount - Spacer Kit

- Attach mounting bracket and two Spacer Plates (2) to frame with mounting plate (1) and four - 5/8" x 7" bolts (7), lockwashers (8), and nuts (9).
- Attach Shank (6 or 6A) to bracket with clamps and two - 5/8" x 4 1/2" bolts (10), lockwashers (8), and nuts (9).

Mount - Standard

- Attach mounting bracket (3) to frame with mounting plate (1). Secure top with two - 5/8" x 6" bolts (7), lockwashers (8), and nuts (9).
- Secure bottom by attaching Shank (6 or 6A) to bracket with clamps and two - 5/8" x 9" bolts (10), lockwashers (8), and nuts (9).

Mount - Spacer Kit

- Attach mounting bracket (3) to frame with mounting plate (1). Secure top with two - 5/8" x 7" bolts (7), lockwashers (8), and nuts (9).
- Secure bottom by attaching Shank (6 or 6A) to bracket with clamps and two - 5/8" x 10" bolts (10), lockwashers (8), and nuts (9).


Note: There are two different shanks:

6 Straight shank

6A Offset shank


Coulter Locations

29 foot

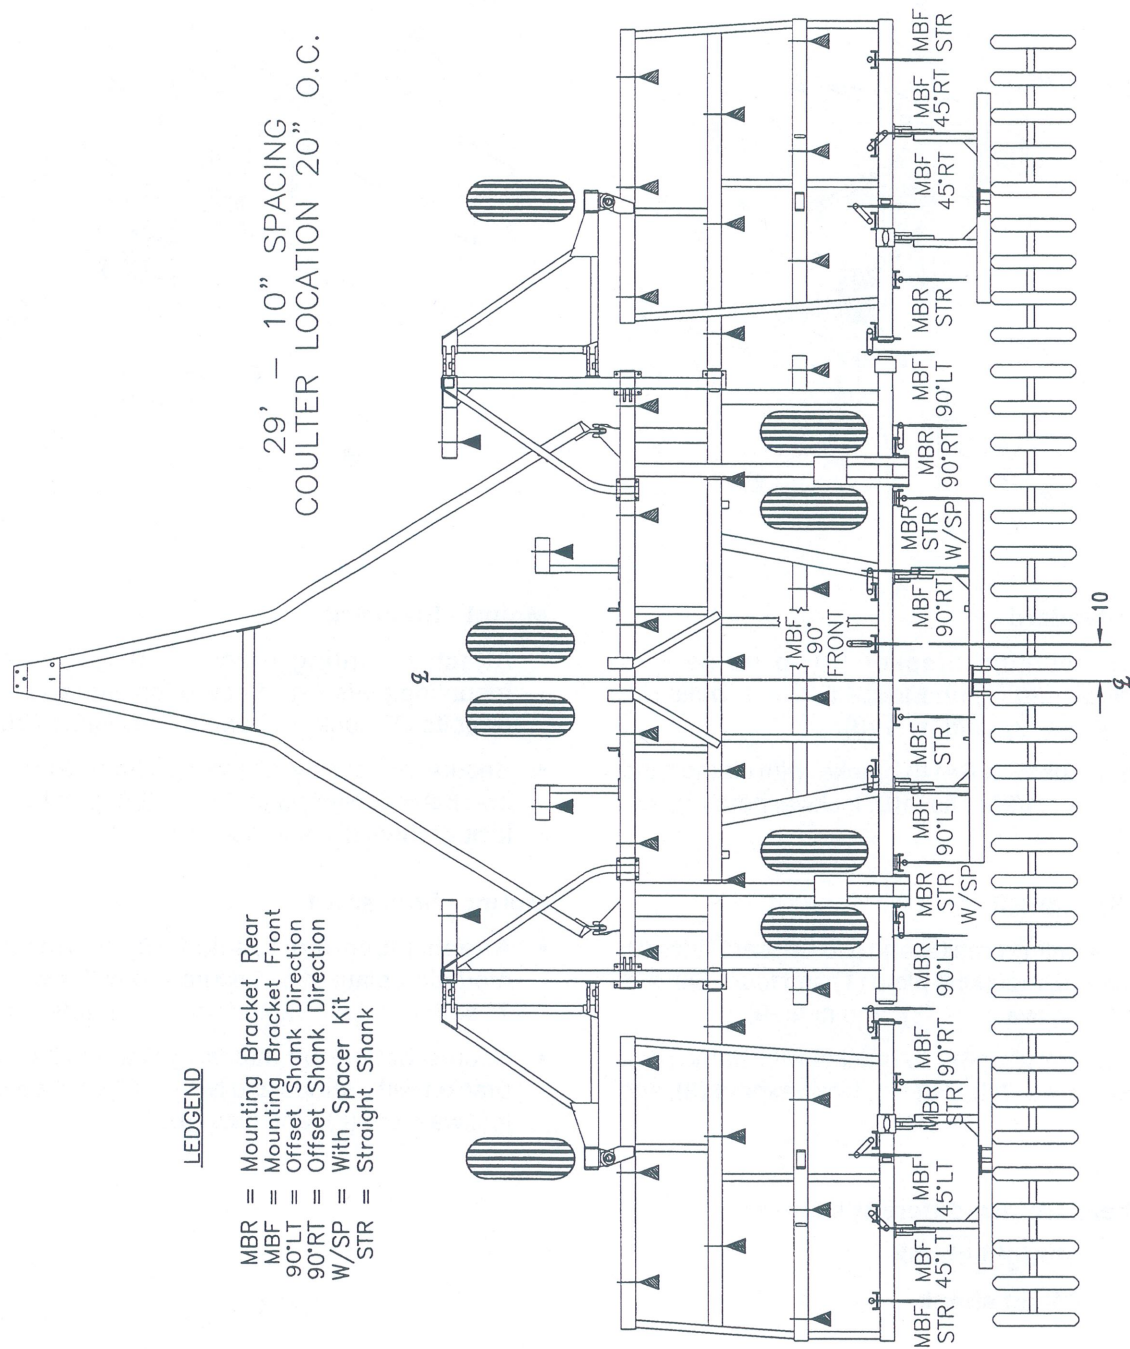


Coulter Locations

34 foot

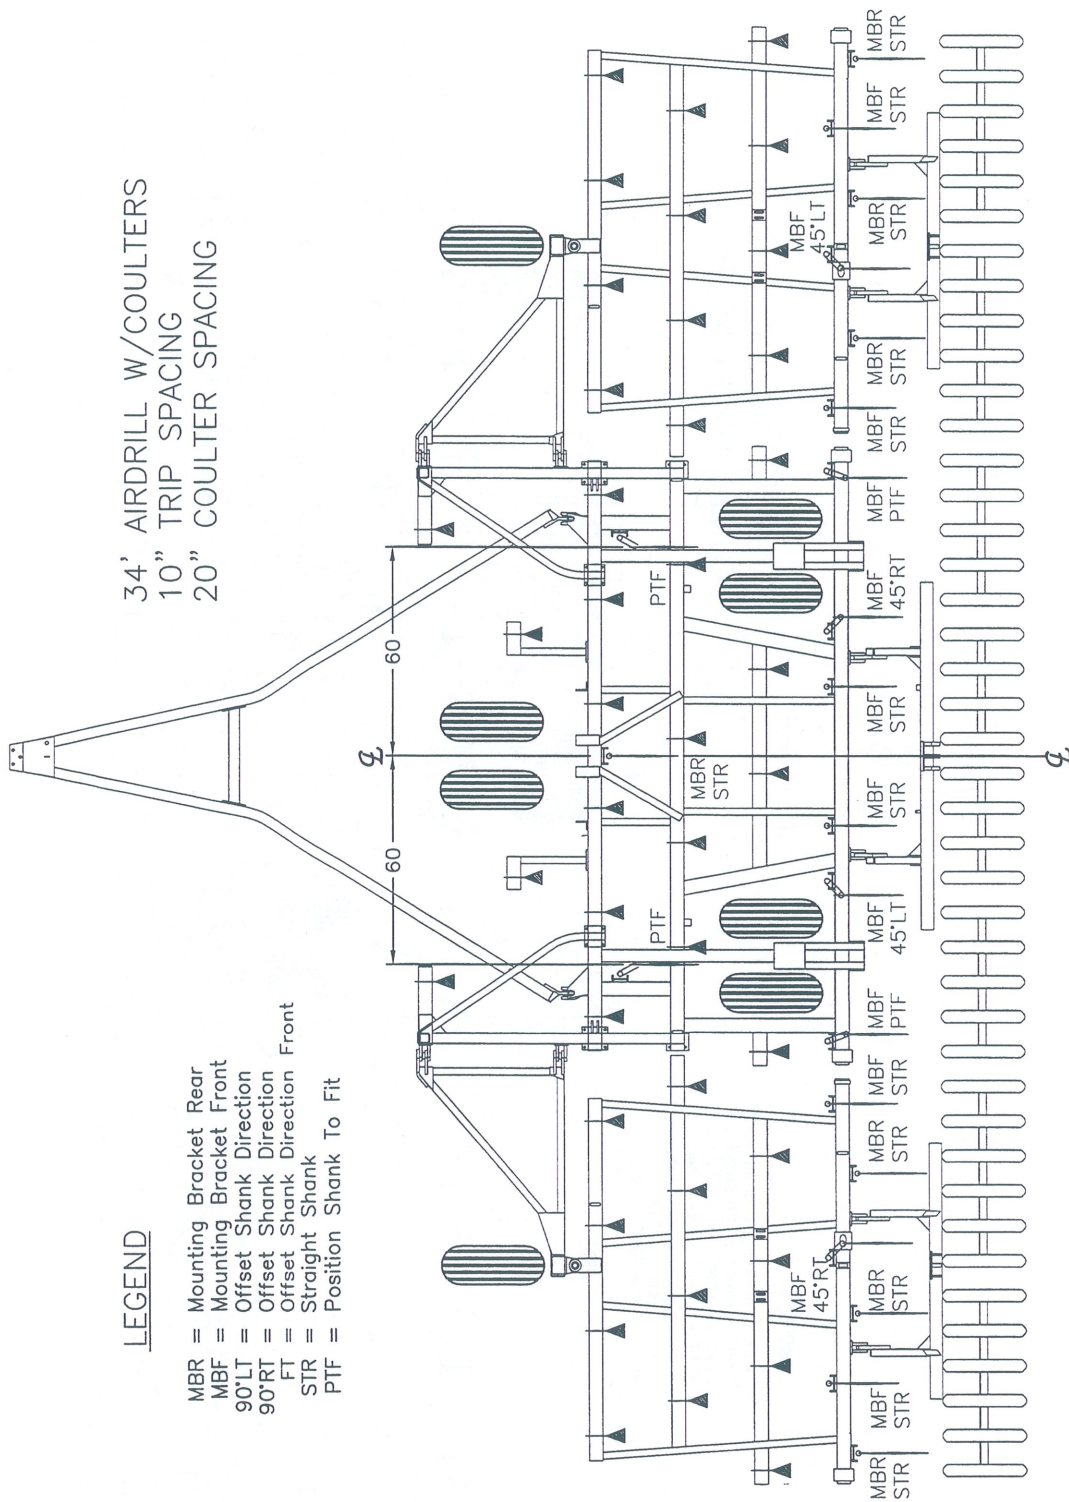


Coulter Locations

40 foot

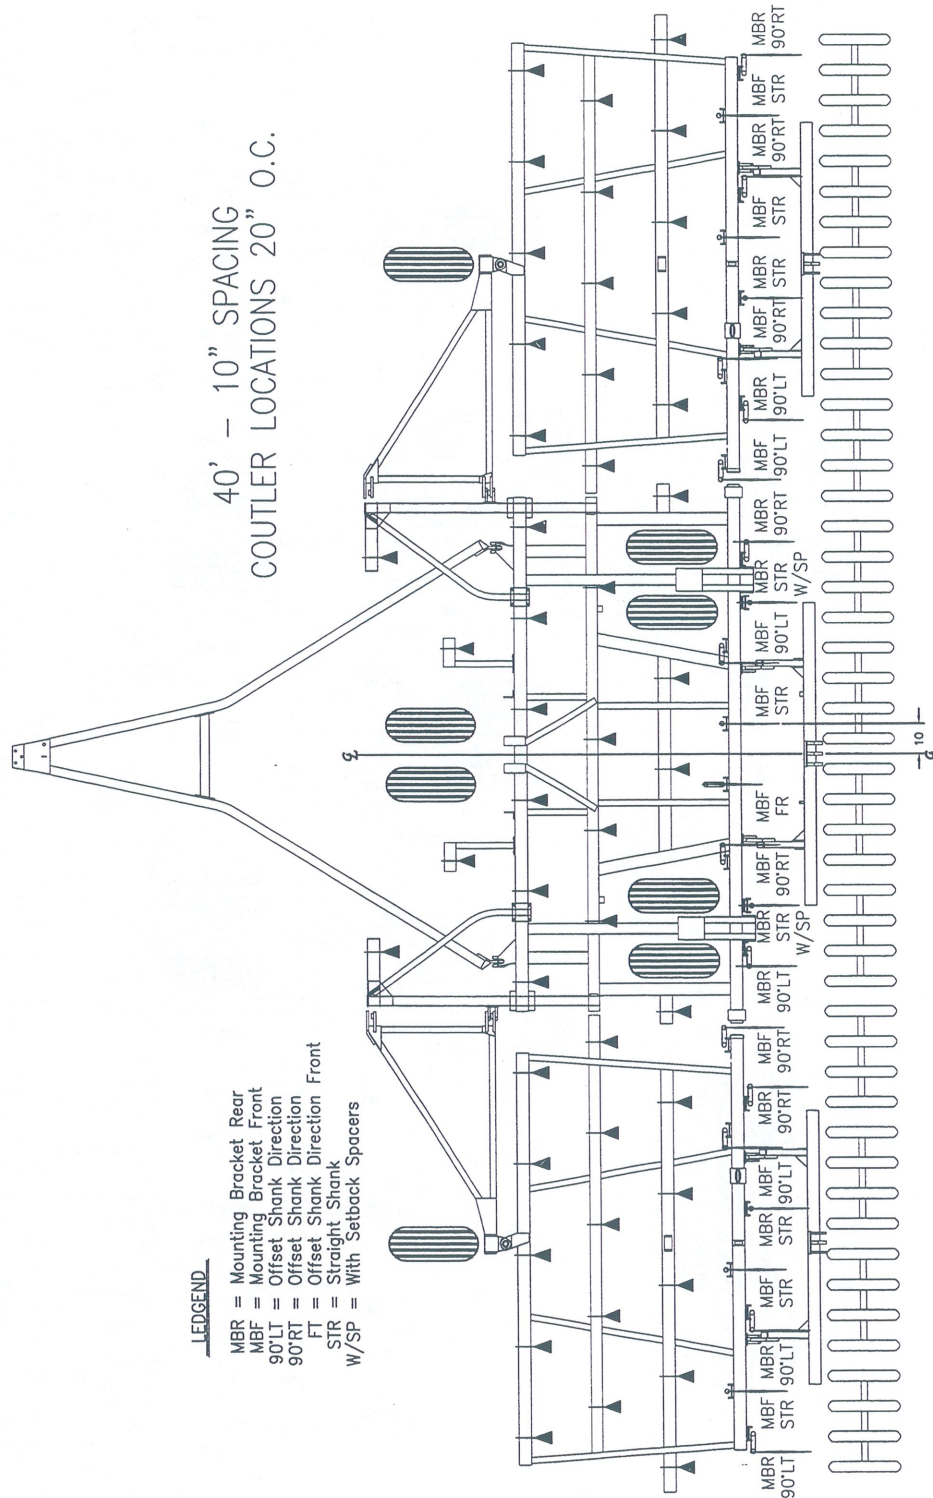


Coulter Locations

49 foot

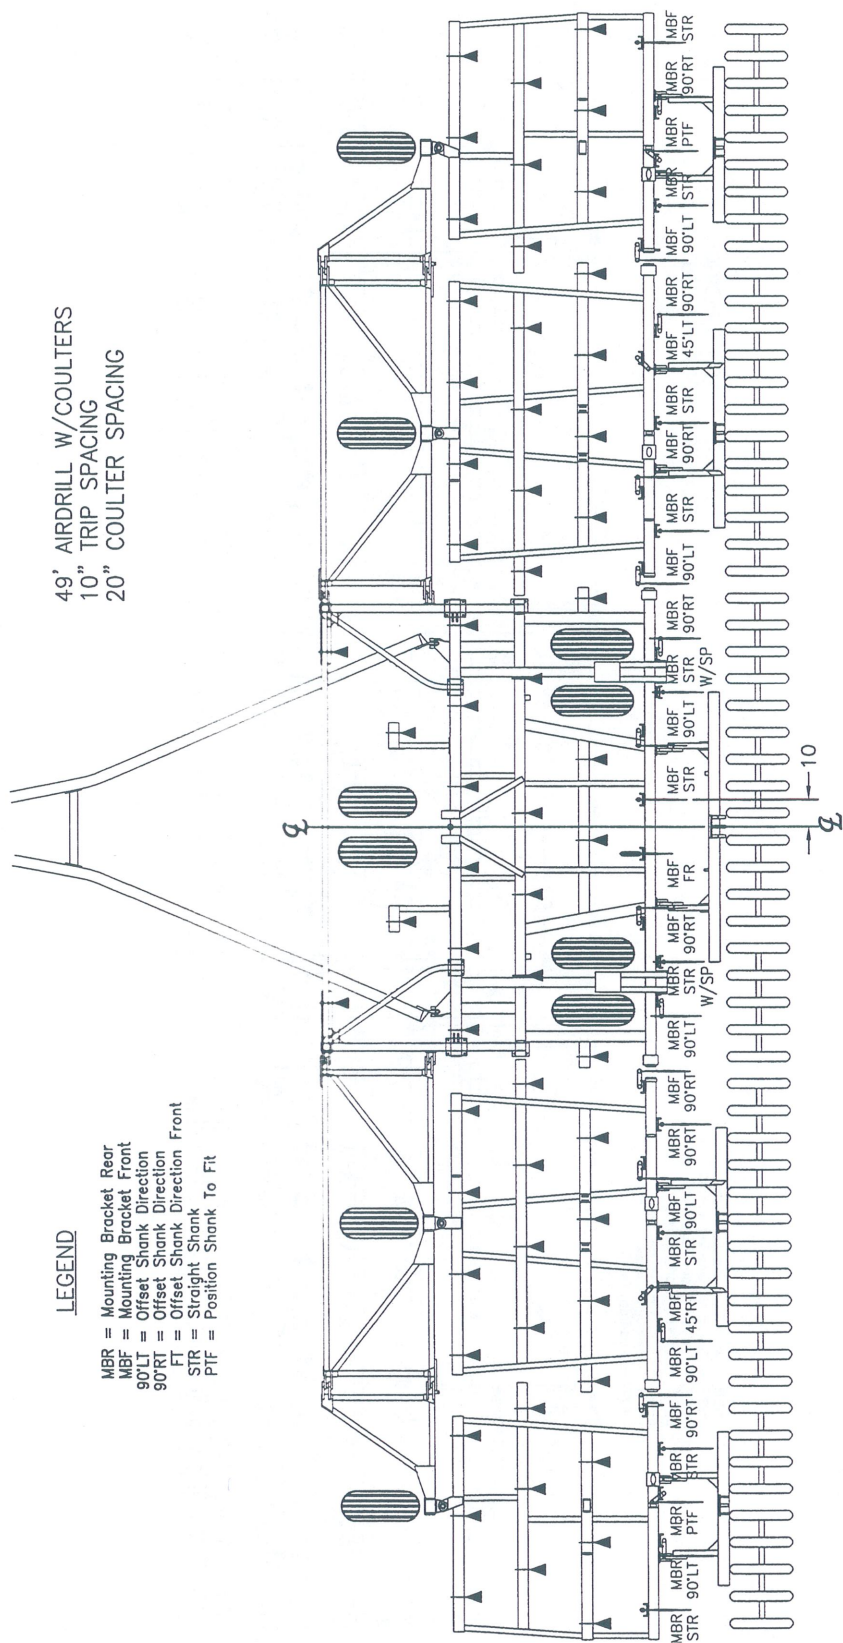


Coulter Locations

55 foot

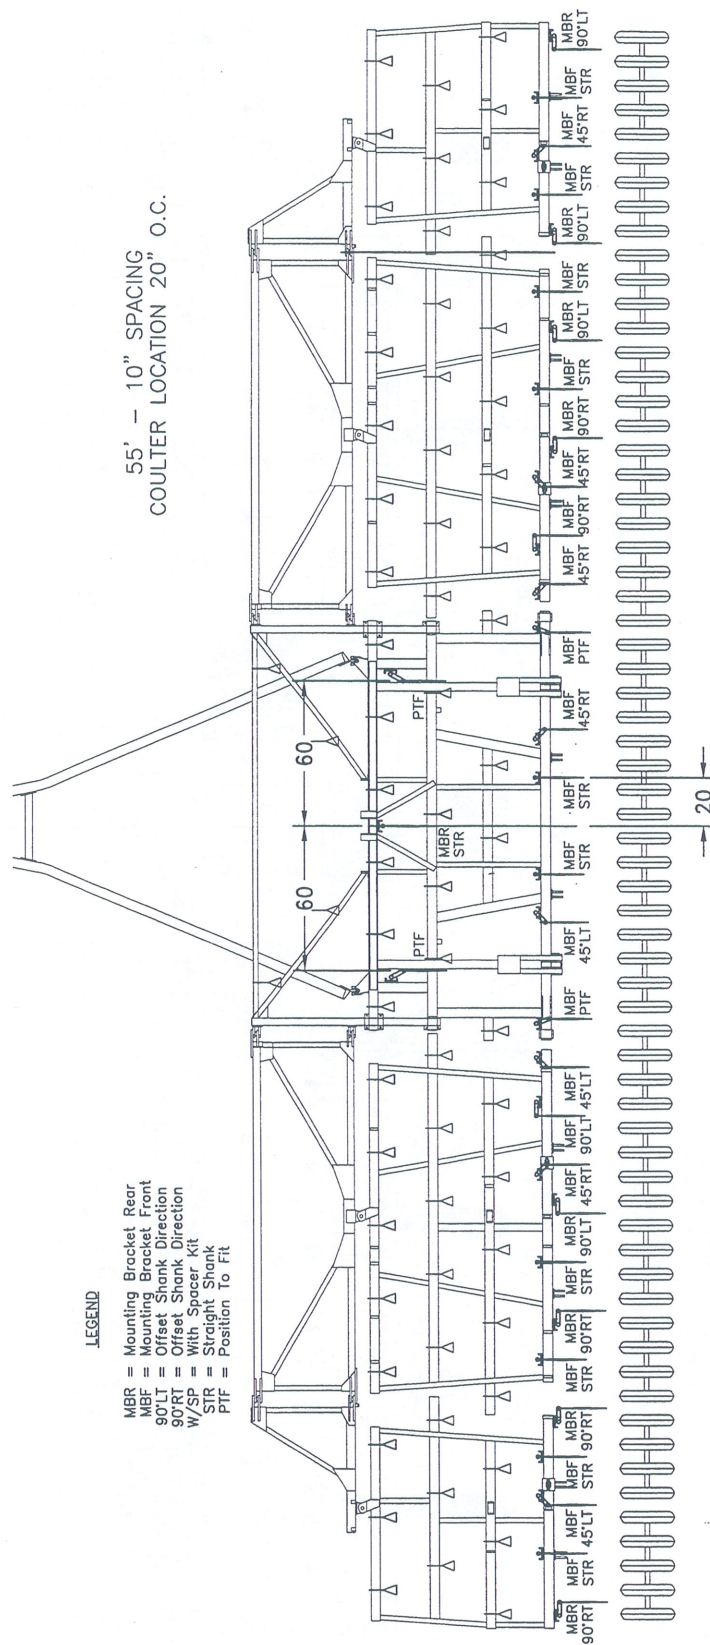

Coulter Locations


60 foot

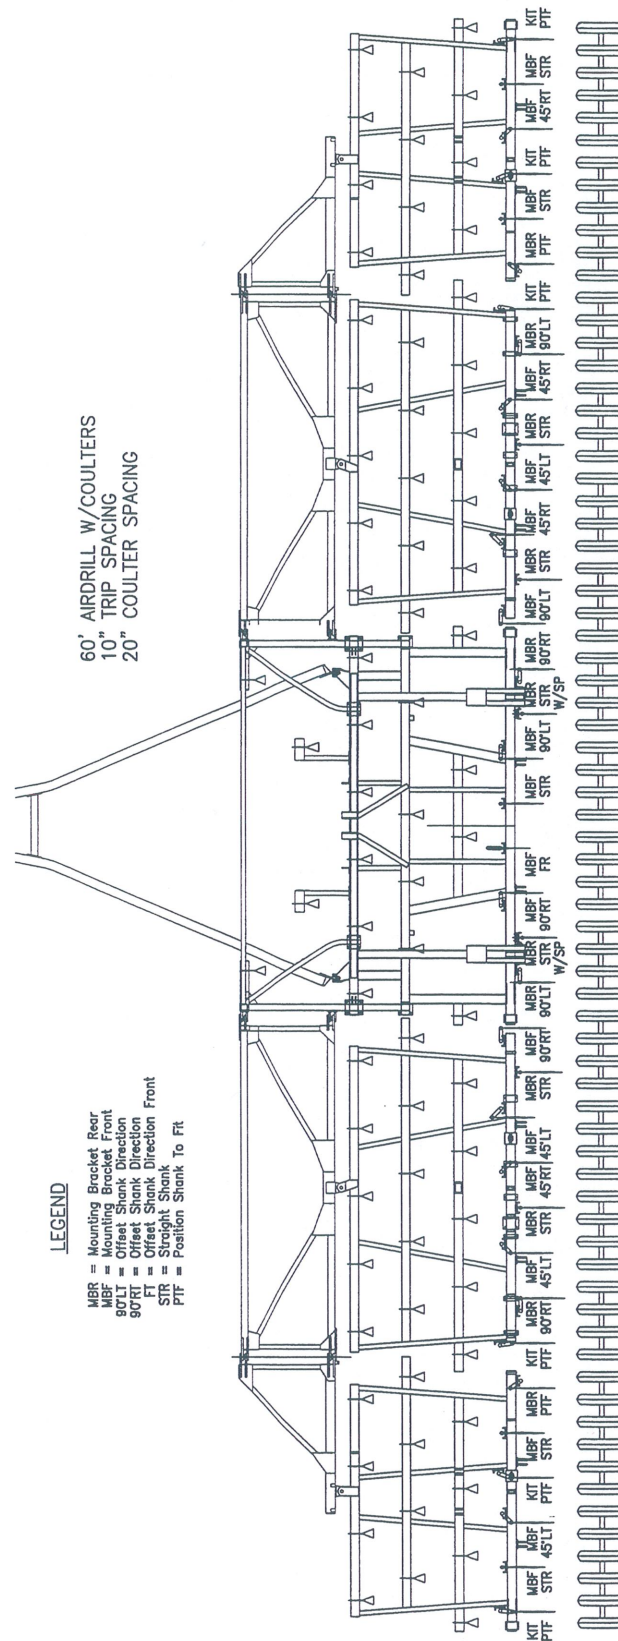

Coulter Locations

Notes

Harrow Locations

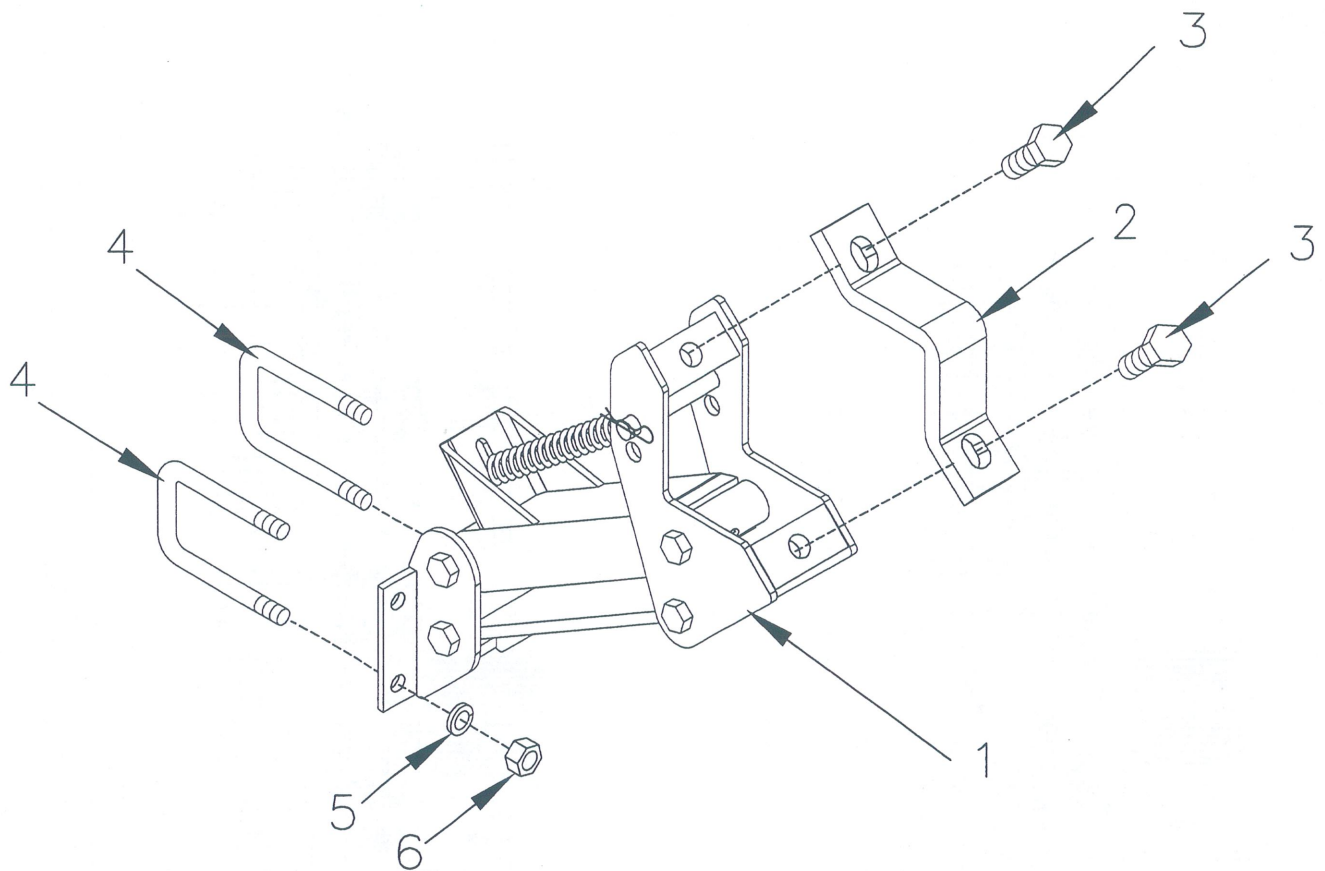


- Mount Harrow Head (1) to Air Drill frame with a Mounting Strap (2) and two - 3/4" x 2 1/4" bolts.

Note: See following pages for harrow locations.


- Attach harrow to head with two - 1/2" U-bolts, 1/2" lockwashers, and 1/2" nuts.

Harrow Locations

29 foot

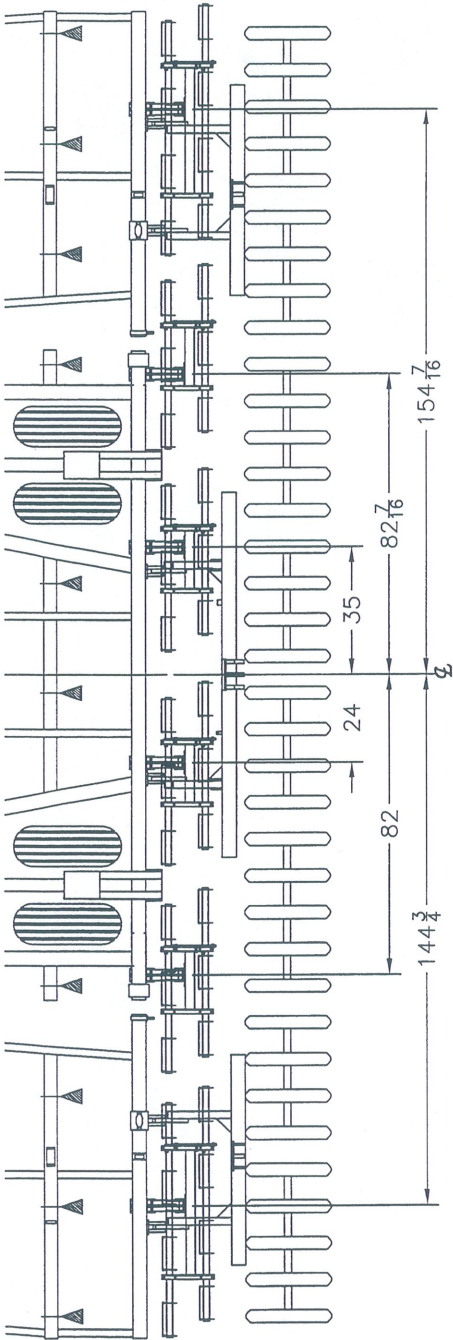


34 foot

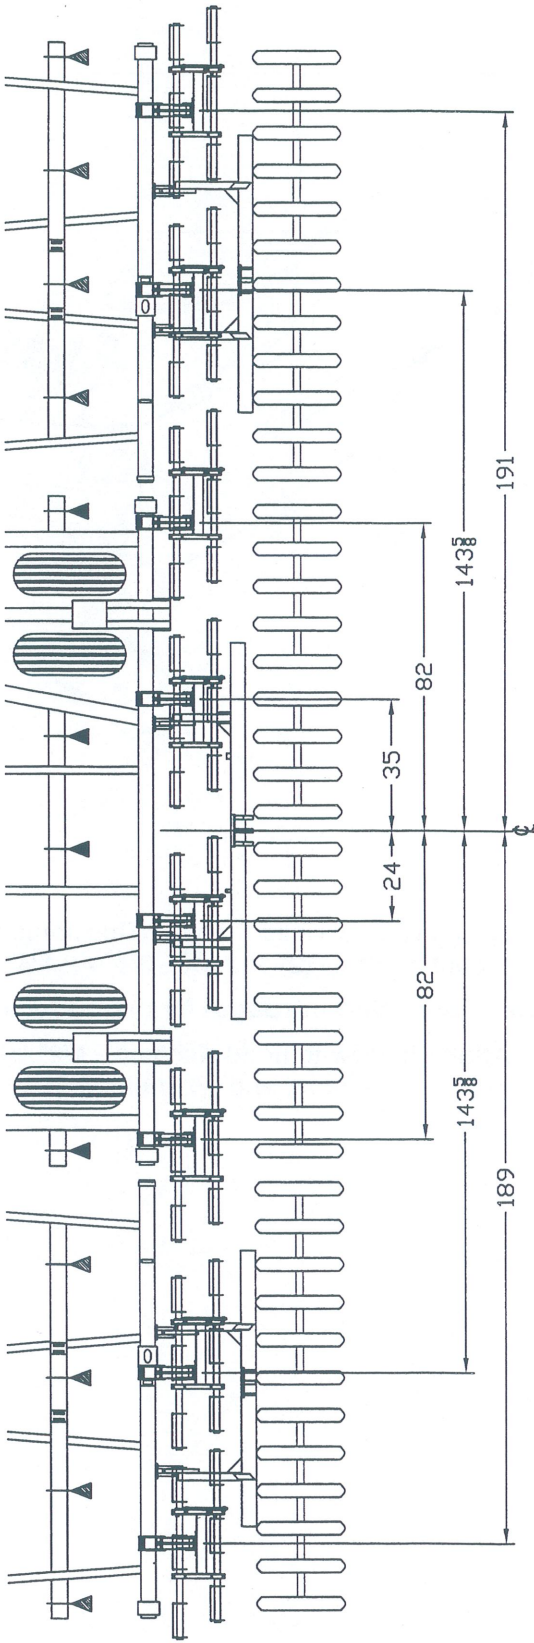


Harrow Locations

40 foot

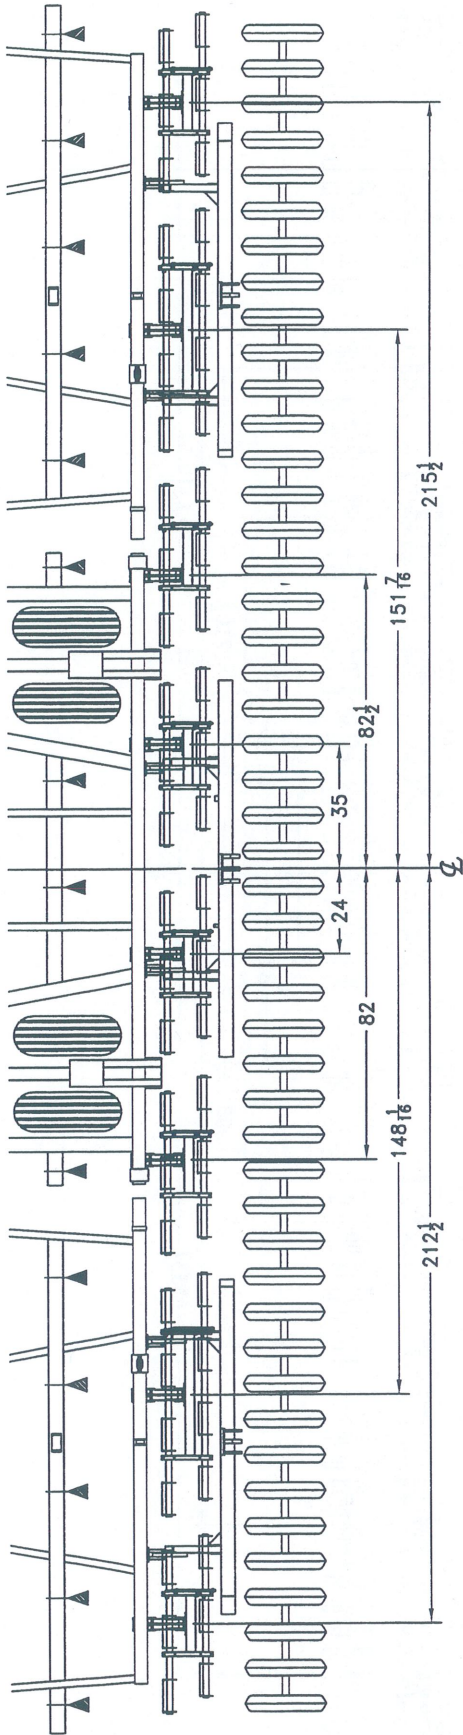


49 foot

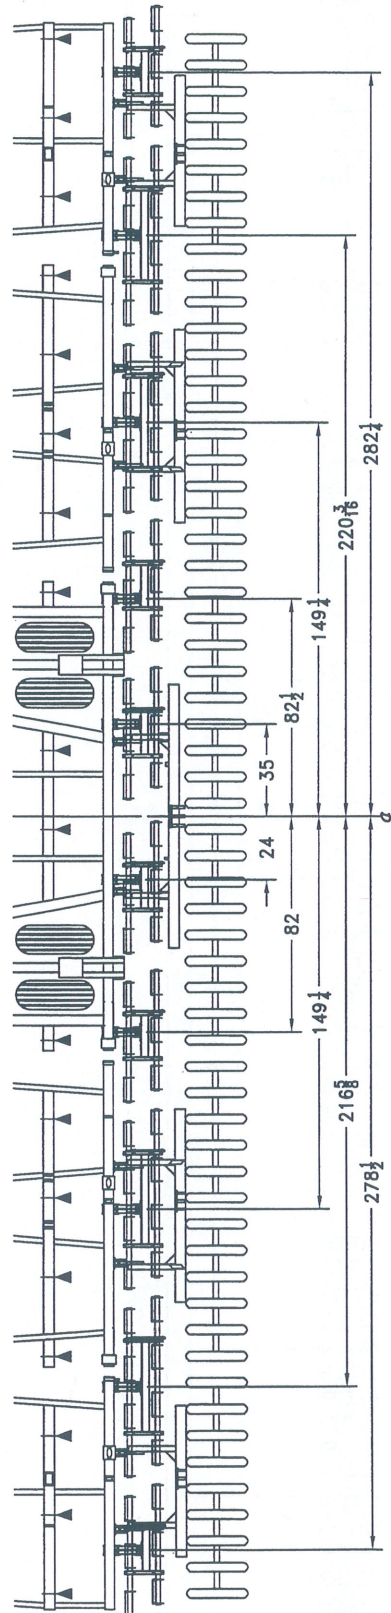


Harrow Locations


55 foot

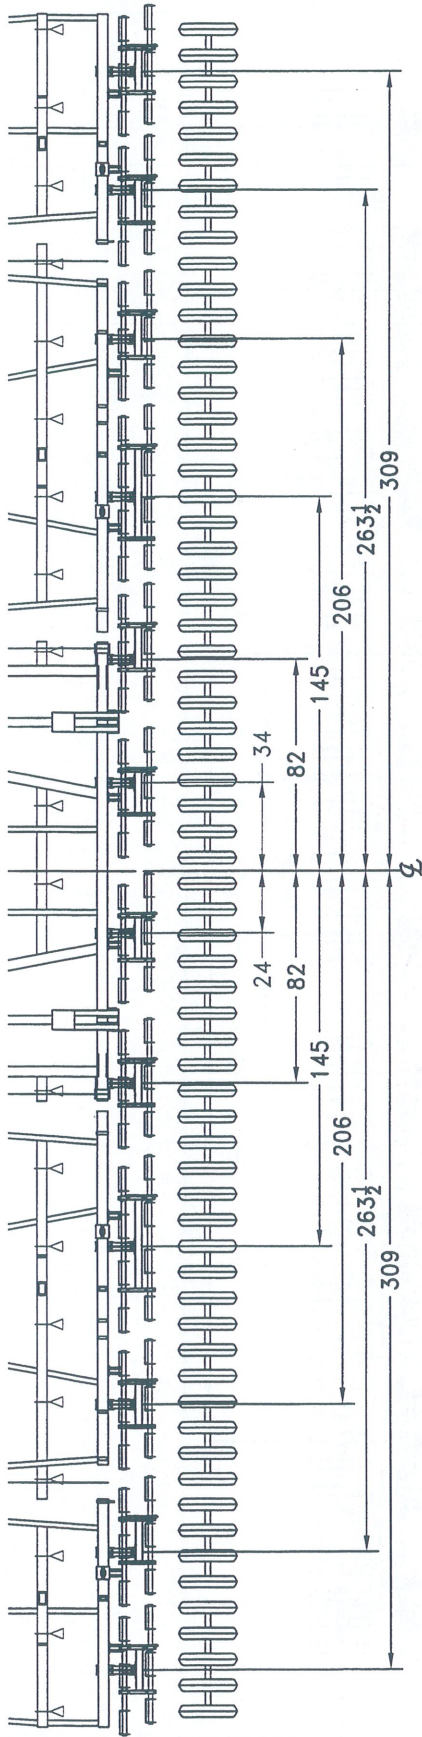

60 foot

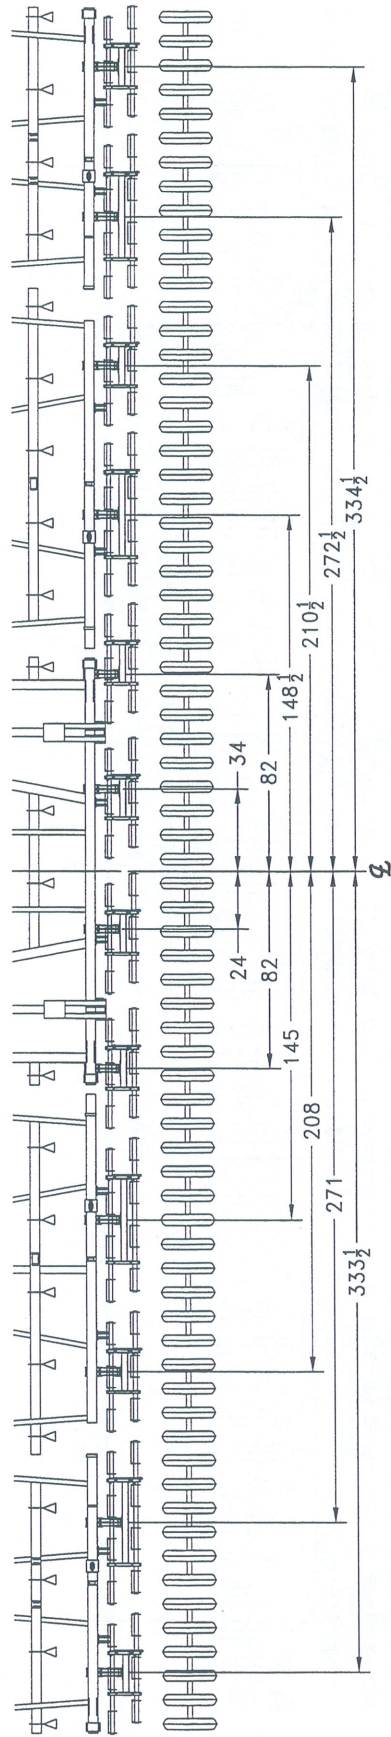

Harrow Locations

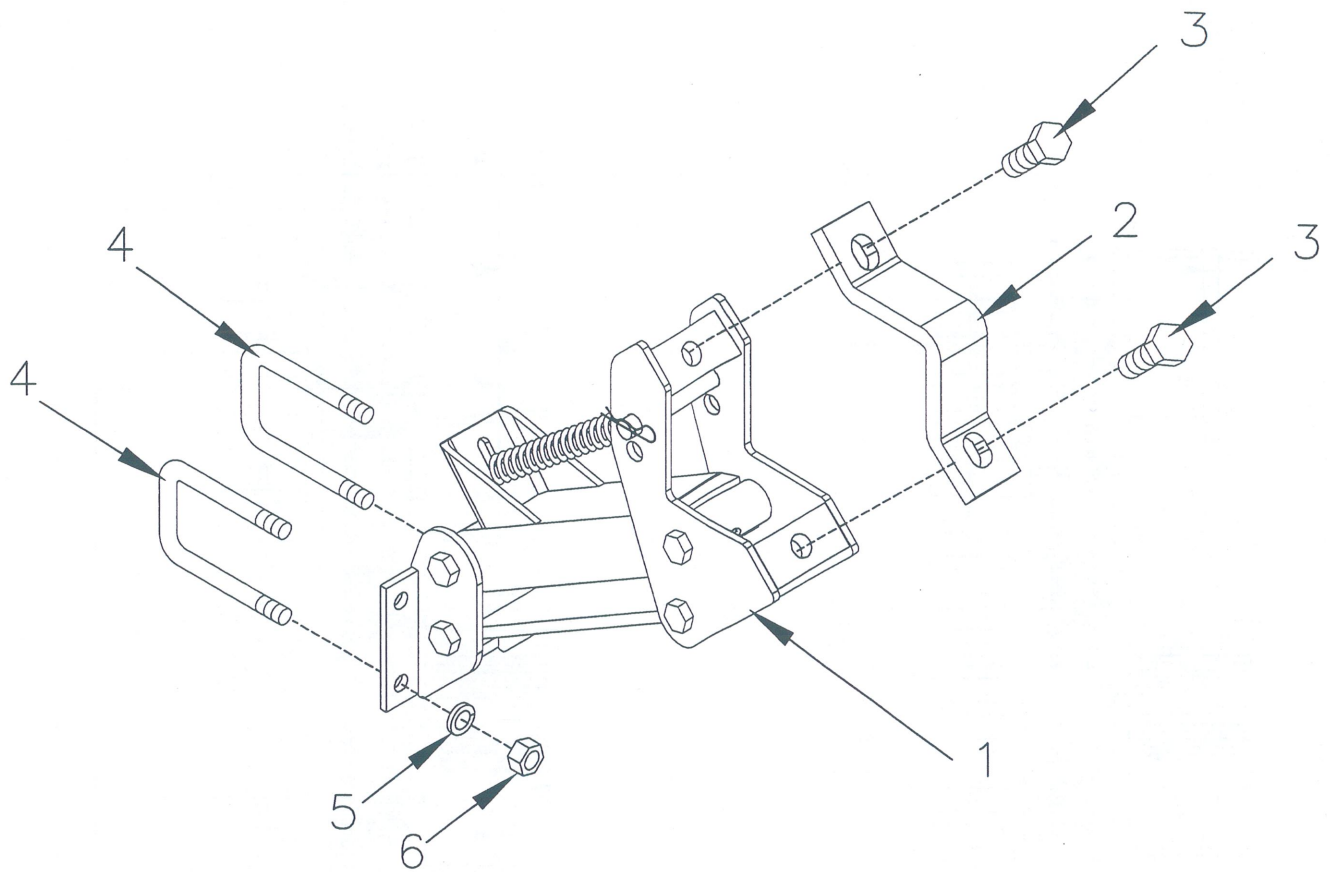


- Mount Harrow Head (1) to Air Drill frame with a Mounting Strap (2) and two - 3/4" x 2 1/4" bolts.

Note: See following pages for harrow locations.


- Attach harrow to head with two - 1/2" U-bolts, 1/2" lockwashers, and 1/2" nuts.

Harrow Locations

29 foot

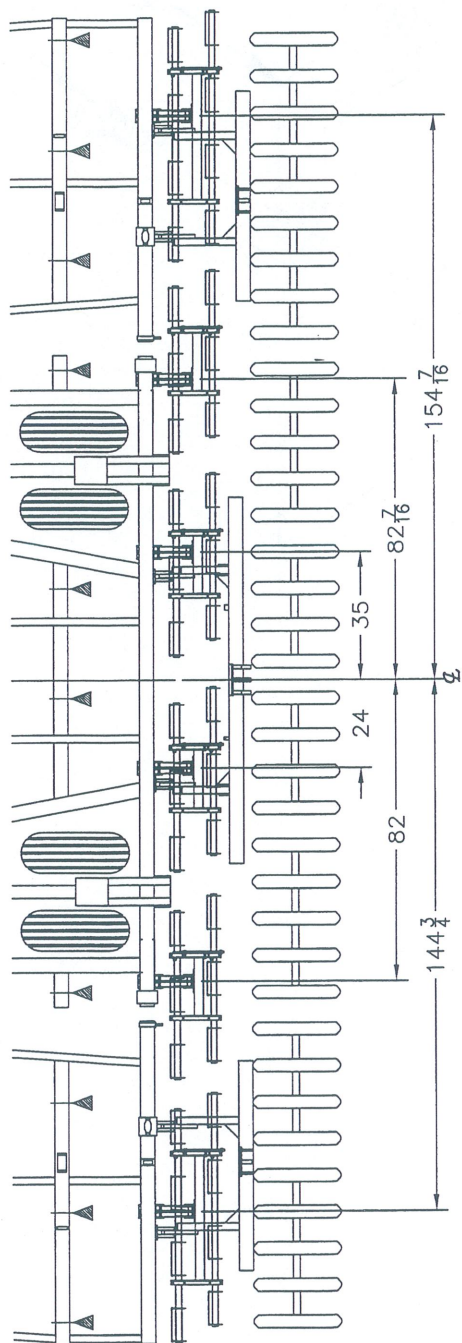


34 foot

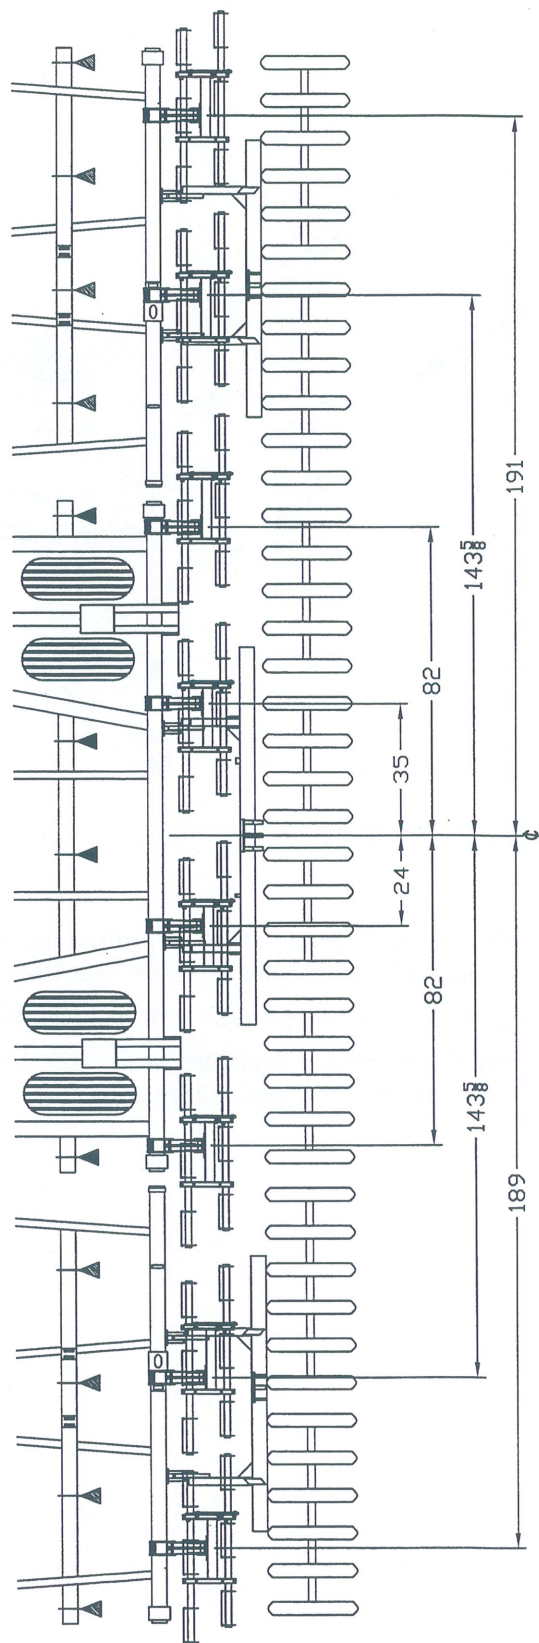


Harrow Locations

40 foot

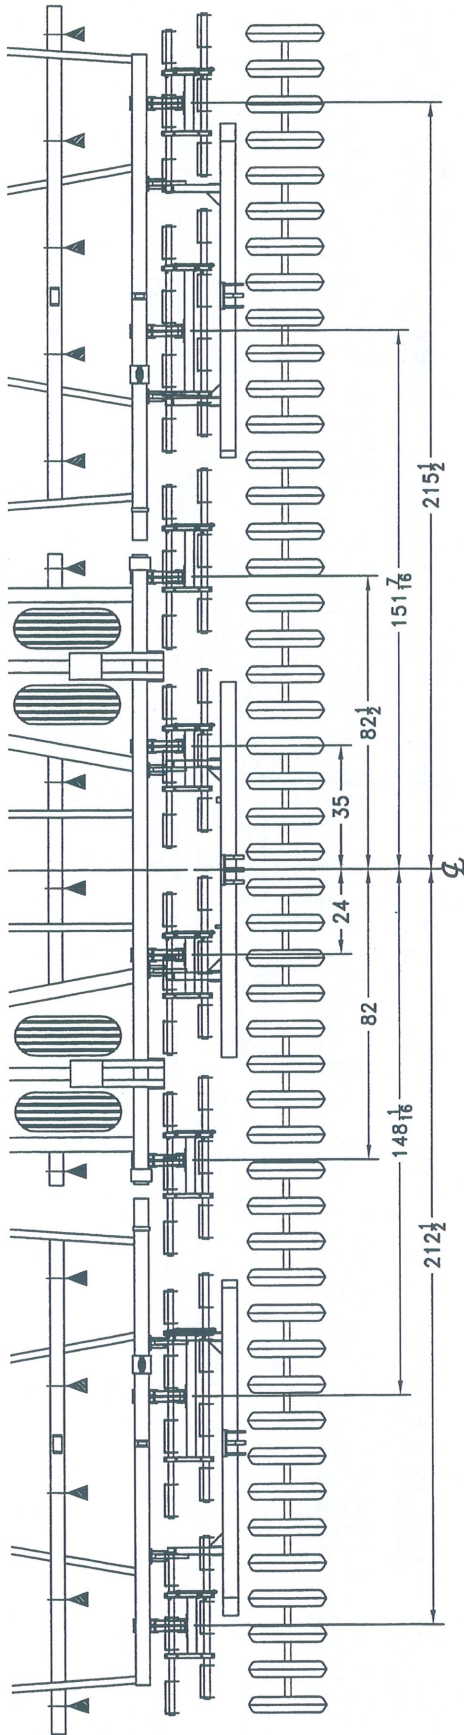


49 foot

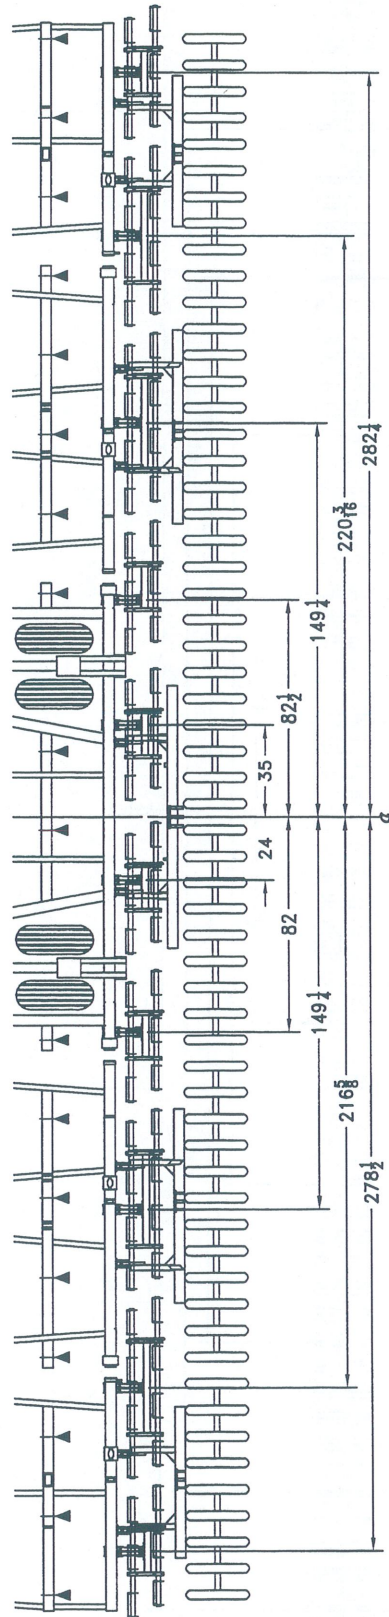

Harrow Locations

55 foot

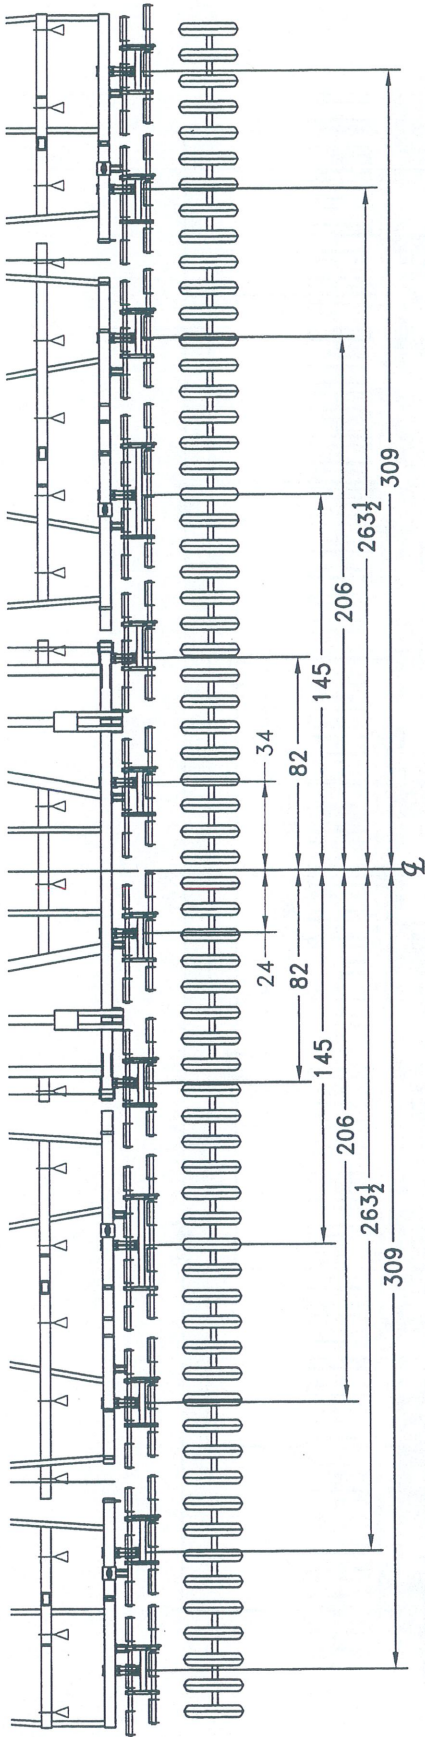

60 foot

