


M MORRIS
C2 CONTOUR

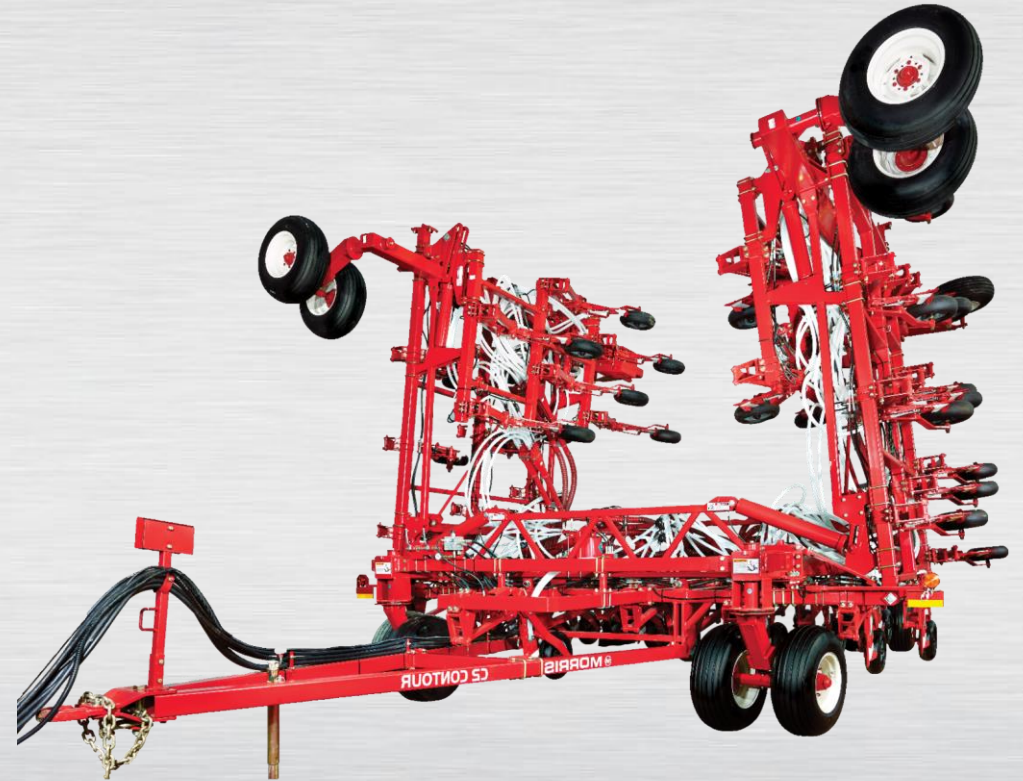

C2 DRILL TRAINING


Module 5: Bleeding Off the Accumulator

PURPOSE

Pressure issues in the accumulator can cause the openers to drop in transport or to jury in service mode, which can cause damage to the openers and even worse, risk personal injury.

RELEASING PRESSURE

- To release the pressure in the accumulator, open the operate/service valve on the valve block about two full turns.

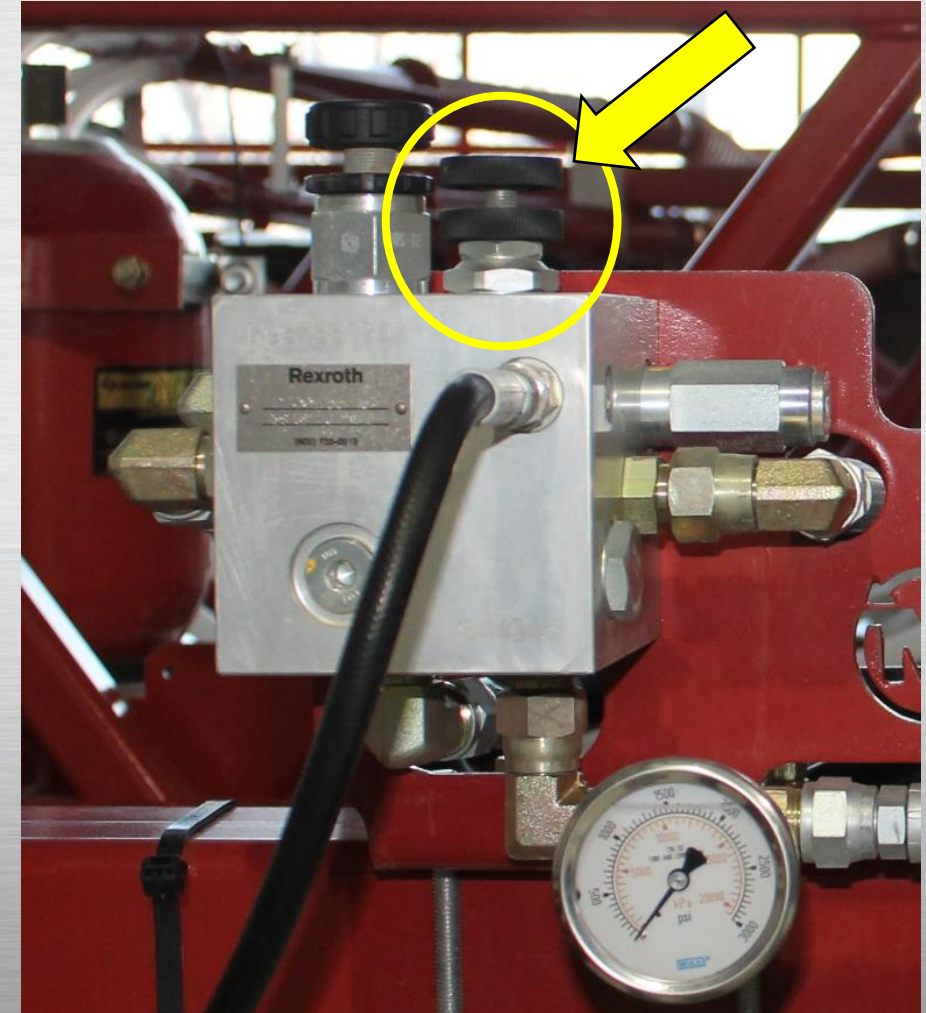

TRACTOR HYDRAULICS

- Next, place the tractor hydraulic valve for the openers in **float** position.
- This allows pressure in the accumulator to drop to zero.



BALL VALVE

- Once the pressure has fallen all the way down to zero, proceed by then lifting the openers and locking the ball valve.
- The ball valve is closed when the handle is not inline with the flow of oil.

